

# Roger Access Control System

## PR-GP-BRD Installation Manual

Firmware version: n/a






Document version: Rev. C




### INTRODUCTION

PR-GP-BRD adjusting-separating module is used in case of electrical incompatibilities or interferences concerning Wiegand 26-66bit and Magstripe interfaces when third party devices are connected to Roger devices.


### CONNECTION DIAGRAMS

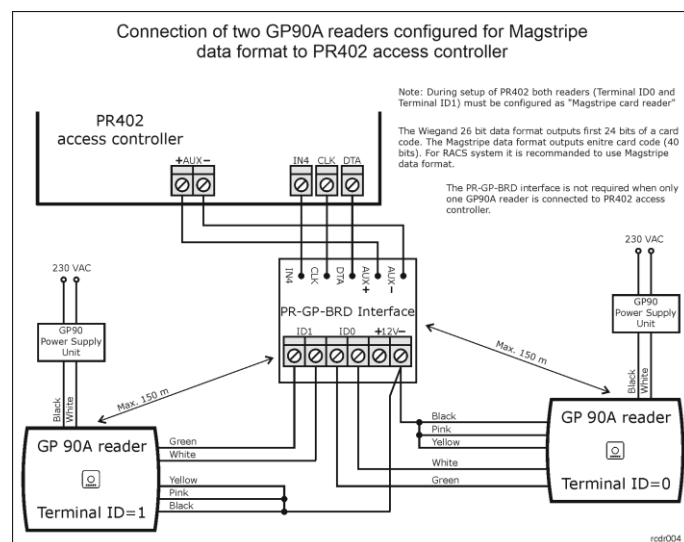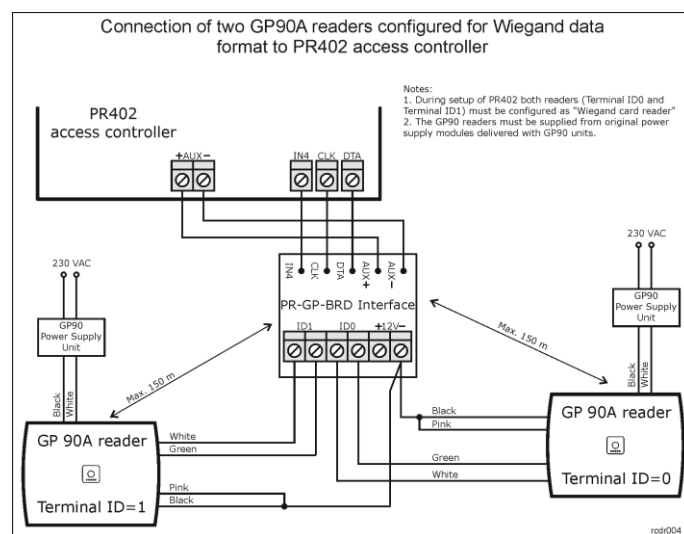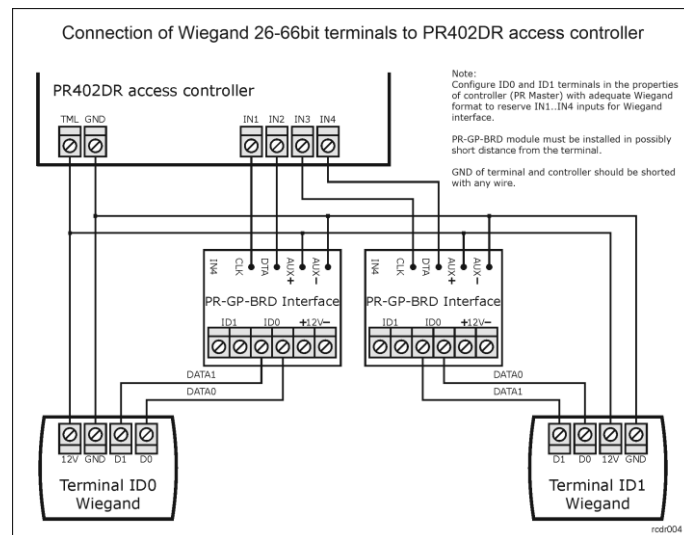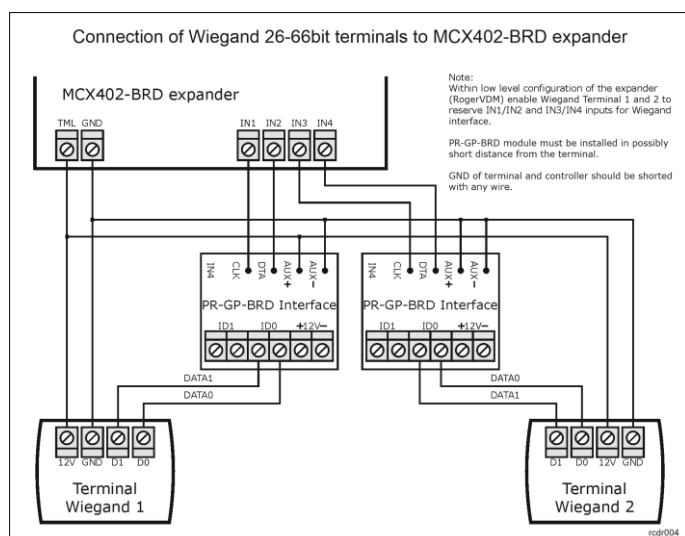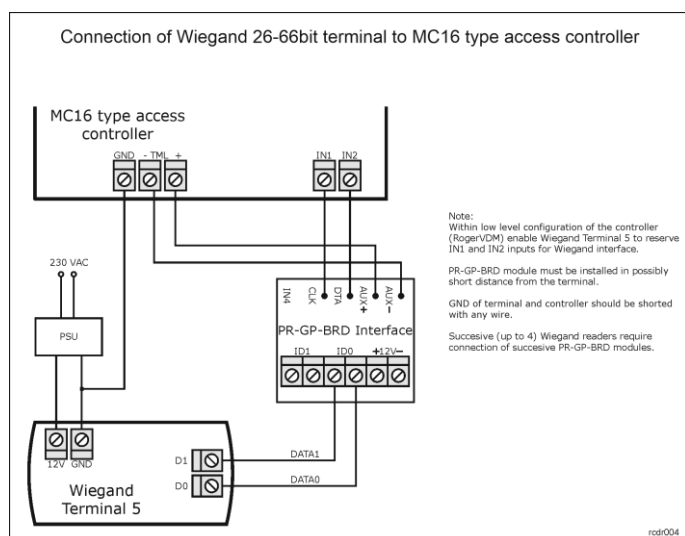



Connection of two GP60A readers configured for Wiegand data format to PR402 access controller

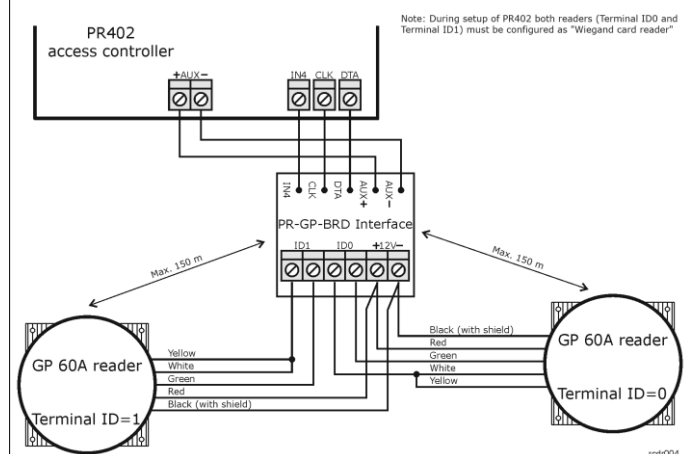

Connection of two GP60A readers configured for Magstripe data format to PR402 access controller

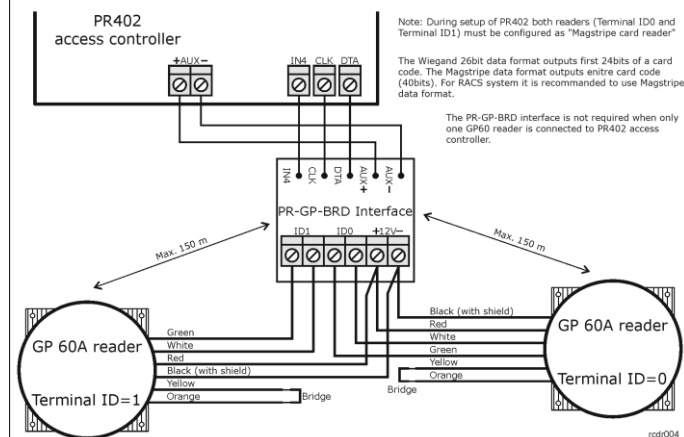

Connection of two F7 fingerprint readers to PR402 access controller

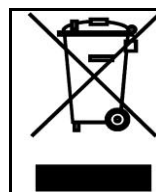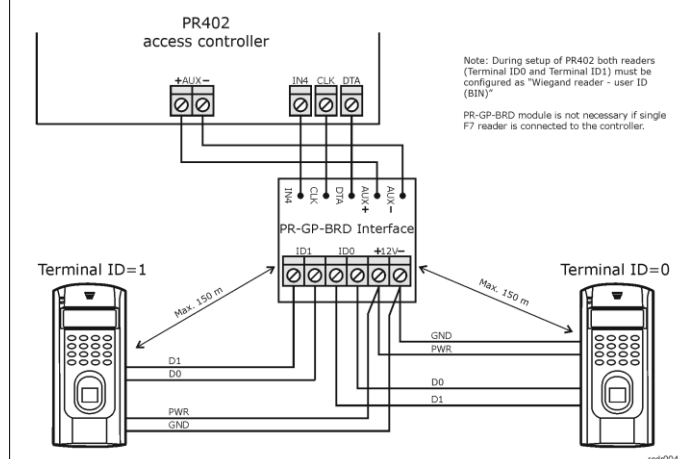

This symbol placed on a product or packaging indicates that the product should not be disposed of with other wastes as this may have a negative impact on the environment and health. The user is obliged to deliver equipment to the designated collection points of electric and electronic waste. For detailed information on recycling, contact your local authorities, waste disposal company or point of purchase. Separate collection and recycling of this type of waste contributes to the protection of the natural resources and is safe to health and the environment. Weight of the equipment is specified in the document.

**Contact:**  
**Roger Sp. z o. o. sp. k.**  
**82-400 Sztum**  
**Gościszewo 59**  
**Tel.: +48 55 272 0132**  
**Fax: +48 55 272 0133**  
**Tech. support: +48 55 267 0126**  
**E-mail: [biuro@roger.pl](mailto:biuro@roger.pl)**  
**Web: [www.roger.pl](http://www.roger.pl)**