

## Roger Access Control System

# RUD-6-LKY Installation Manual

Firmware version: n/a  
Document version: Rev. D



This document is subject to the Terms of Use in the current version published on the website [www.roger.pl](http://www.roger.pl). The manufacturer reserves the right to make changes to the product without prior notice.


### INTRODUCTION

RUD-6-LKY hardware license key must be applied in case of licensed version of RACS 5 management software (VISO EX) and/or licensed version of Time&Attendance software (RCP Master 3). The key is connected to the USB port of computer with installed License Server which is a component of RogerSVC software. License activation additionally requires purchase of license file which defines parameters of VISO EX and/or RCPM3 programs.

Note: Alternatively, in special cases the VLK-1Y virtual license key can be applied instead of hardware RUD-6-LKY key. Such virtual key is dedicated to virtual servers which do not offer USB port. VLK-1Y key is valid for a period of 12 months and then it requires subscription renewal. The virtual key requires stable internet connection to external NTP servers via 123 port

### KEY ACTIVATION


#### Activation procedure:

1. Connect RUD-6-LKY to computer's USB port.
2. Download and install RogerSVC software from [www.roger.pl](http://www.roger.pl)
3. During the installation select License server and other components as required.
4. Start RACS Services Manager and double click its icon  in Windows tray.
5. In the opened window select License service tile.
6. In the next window select Load license file command and indicate previously ordered license file.
7. In case of multiple workstation system, select Configure address command and enter IP address of the computer and port so the License server could be accessed by remaining workstations in LAN.
8. Select Start or Restart button.
9. On each workstation start licensed software (VISO, RCPM3) and in the top menu select System->Select Licensing Server.
10. In the opened window select or enter IP address and port of computer with installed License server and connected RUD-6-LKY key.

Note: Regardless of the number of workstations with VISO EX and/or RCPM3 system, the License server is installed on single computer in LAN and single RUD-6-LKY key is connected to the computer.

### APPENDIX

Table 1. Specifications	
Supply voltage	5VDC directly from USB port
Current consumptions (average)	20 mA
IP	IP20
Working temp. range	+5... +45°C
Relative humidity	0 to 95% (no condensation)
Dimension H x W x D	88,0 x 30,5 x 14,5 mm
Weight	~20g
Certificates	CE

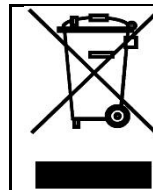

This symbol placed on a product or packaging indicates that the product should not be disposed of with other wastes as this may have a negative impact on the environment and health. The user is obliged to deliver equipment to the designated collection points of electric and electronic waste. For detailed information on recycling, contact your local authorities, waste disposal company or point of purchase. Separate collection and recycling of this type of waste contributes to the protection of the natural resources and is safe to health and the environment. Weight of the equipment is specified in the document.

**Contact:**  
**Roger Sp. z o. o. sp. k.**  
**82-400 Gościszewo 59**  
**Tel.: +48 55 272 0132**  
**Fax: +48 55 272 0133**  
**Tech. support: +48 55 267 0126**  
**E-mail: [support@roger.pl](mailto:support@roger.pl)**  
**Web: [www.roger.pl](http://www.roger.pl)**