


Fig. 4 Connection of MCI-2 interface to MCT reader and PR series controller

Notes:

- If devices are not supplied from the same power supply then according to fig. 4 their GND terminals must be connected with any wire.
- MCT readers must be configured with default ID=100 address.
- If RS485 bus encryption is enabled then both MCI and MCT must be configured in the same way.

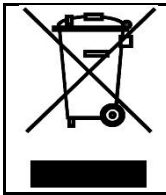

This symbol placed on a product or packaging indicates that the product should not be disposed of with other wastes as this may have a negative impact on the environment and health. The user is obliged to deliver equipment to the designated collection points of electric and electronic waste. For detailed information on recycling, contact your local authorities, waste disposal company or point of purchase. Separate collection and recycling of this type of waste contributes to the protection of the natural resources and is safe to health and the environment. Weight of the equipment is specified in the document.

**Contact:**  
 Roger Sp. z o. o. sp. k.  
 82-400 Gościszewo 59  
 Tel.: +48 55 272 0132  
 Fax: +48 55 272 0133  
 Tech. support: +48 55 267 0126  
 E-mail: [support@roger.pl](mailto:support@roger.pl)  
 Web: [www.roger.pl](http://www.roger.pl)