

Roger Access Control System

Roger PIN Generator

Mobile App

Operating Manual

Software Version: v2.0

Document Version: Rev. B

This document is subject to the Terms of Use in the current version, published on the website www.roger.pl


DESIGN AND PURPOSE

Roger PIN Generator v2 is standalone application designed to generate PIN codes for ADL-2 electronic locks manufactured by Roger. It operates independently of the rps.roger.pl service and does not require a connection to it.

INSTALLATION AND CONFIGURATION OF THE APPLICATION

The Roger PIN Generator app requires Android 5.0/iOS 12.0 or later. The apps are available on the Play Store and App Store, respectively. Once installed, the app is ready for configuration.

Using the PIN Generator v2 application requires adding ADL-2 locks, to do this you need to:

- Add a lock with a  button.
- Enter the necessary data: Lock name, BLE MAC address, User key.
- Finish adding the lock by clicking the "Add" button.

MEANING OF OPTIONS

Section: Settings

Option: Clear Local Data

Wipes the data of RPG app stored on your phone.

Option: Open System Settings

Opens the application settings windows.

Option: Language

Allows to select the language (available: Polish or English).

Option: Default PIN type

This setting allows you to select the default PIN code when generating it (available: PIN Guest 8, PIN Guest 12).

Option: SMTP Gate

This setting allows you to add an SMTP gateway that allows you to send emails with generated PIN codes.

Section: Common Settings

Option: Send SMS Upon PIN Creation

Allows to enter a phone number, to which the PIN code generated in the application will be sent after creation. Most often it will be the phone numbers of people who would like to be informed about all the codes generated for a given lock.

Option: Send Mail After PIN Creation

Allows to enter an e-mail address to which information about each generated PIN code will be sent.

Option: Common description for all locks

Allows to enter an additional description that will be sent after each PIN code is generated. The description will apply to all locks defined within the account.

Option: Default Check-in Hour

Allows to select the default time at which the operation of the **PIN Guest 12** code will be activated.

Option: Default Check-out Hour

Allows you to select the default time at which the **PIN Guest 12** code will be deactivated.

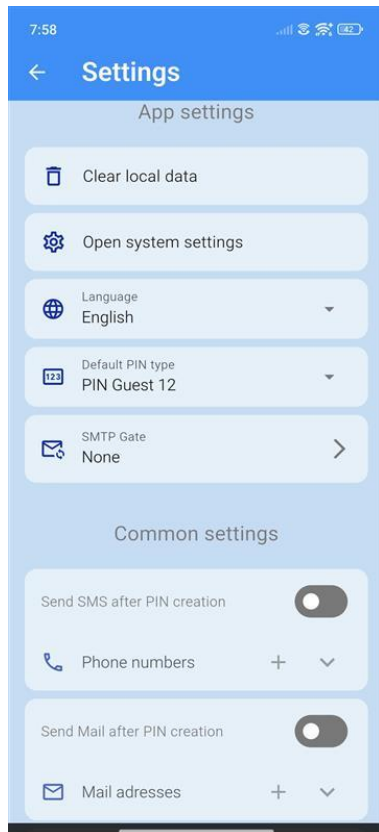




Fig. 1 Application settings view.

PROGRAM FEATURES

Generate a PIN from an app

To generate a new PIN, select the appropriate lock from the main view, then click on the icon 

and . Then the "Add New PIN" window will appear. Select the PIN type and enter the required and optional details, then click the "Add" button.

Note: A description of the different types of PIN codes and the parameters required to generate them can be found in [the ADL-2 Lock User Manual](#) available on the roger.pl website.

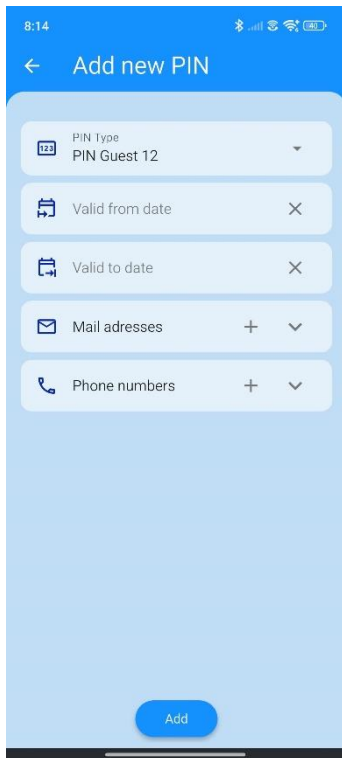


Fig. 2 View of adding a PIN code.

Lock settings management

The Roger PIN Generator app allows you to edit the settings of your ADL-2 lock. To do this, long-press the selected lock from the main screen and then click the "Edit Lock" button.

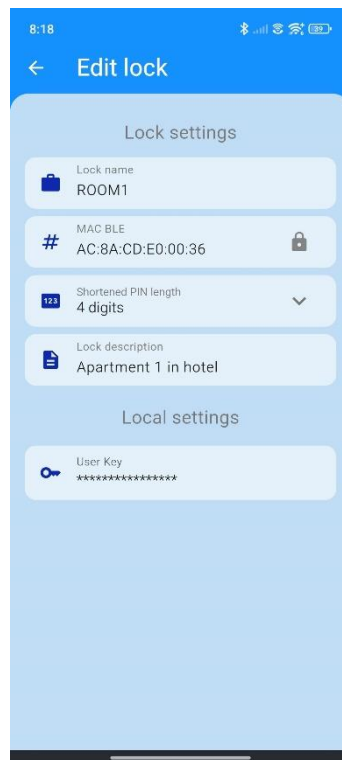
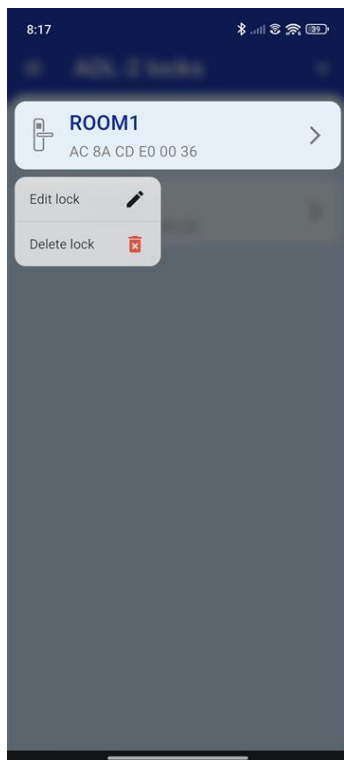


Fig. 3 ADL-2 lock settings editing view.

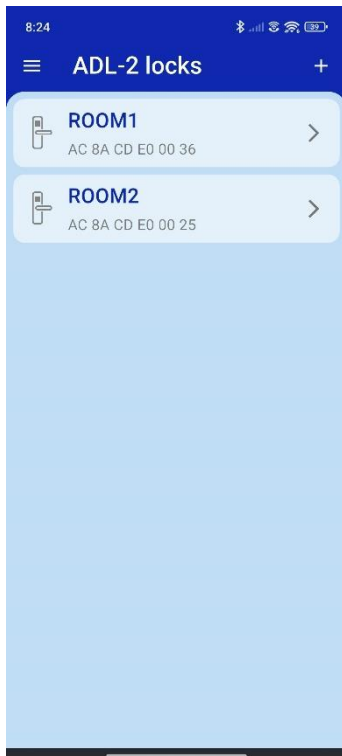


Fig. 4 Main view of the added ADL-2 locks.

Contact:
Roger sp. z o. o. sp. K.
82-400 Gościszewo 59
Tel.: +48 55 272 0132
Fax: +48 55 272 0133
Tech. support.: +48 55 267 0126
E-mail: biuro@roger.pl
Web: <http://www.roger.pl>