

Roger Access Control System


Communication interface UT-2USB v2.0

Operating Manual

Hardware version: 2.0

Firmware version: 2.0.2

Document version: Rev. C

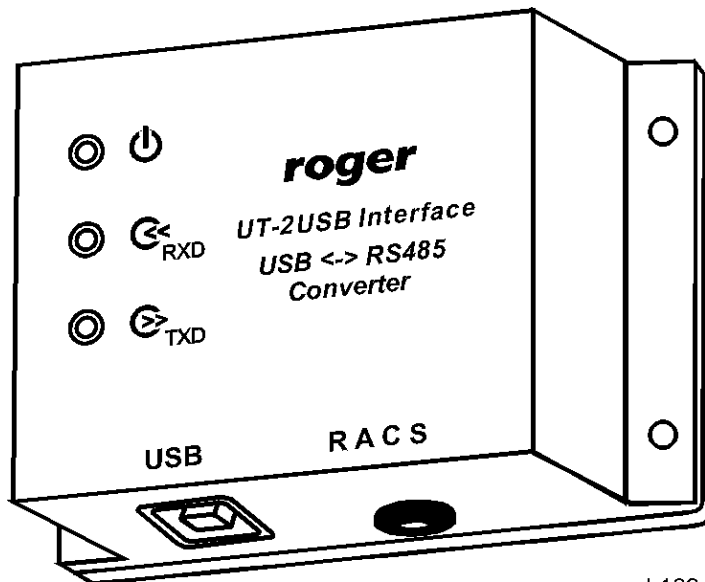

rcdr189

1. DESCRIPTION AND SPECIFICATION

The UT-2USB v2.0 interface enables communication with RS485 devices via a computer's USB port. It is primarily designed for use in the RACS access control system; however, as it is installed as a virtual serial COM port, it may also be used with third-party devices.

If the interface is intended for use outside the RACS system, it is recommended to perform appropriate tests to verify its suitability for a given application.

Due to the galvanic isolation in the UT-2USB, the computer is electrically separated from devices connected to the RS485 bus, preventing interference caused by equalizing currents between power supply systems.

Table 1. Specification	
Parameter	Value
Nominal supply voltage	Nominal 12VDC and 5VDC on PC USB side
Nominal current consumption	Average 20 mA (from 12VDC power supply) and 40 mA (from USB port)
Max. baud rate	230,4 kbit/s
Max. RS485 transmission range	1200m (for 9600kbit/s)
Operating environment	Indoor general conditions, temperature: +5°C to +40°C, relative humidity: 10 to 95% (no condensation)
Dimensions (H x W x D)	68 x 45 x 23 mm
Weight	Approx. 40g
Compliance	CE, RoHS

2. INSTALLATION

2.1 Terminals and connection diagram

Table 2. UT-2USB terminals	
Terminal	Function
12V	Positive power supply
GND	Negative power supply (ground) and reference potential for RS485 bus
A	RS485 bus, line A
B	RS485 bus, line B
USB	PC connection socket USB-B type

Example of connection to RACS system is shown in fig. 1. The device is supplied from 12VDC voltage (acceptable voltage range 10-15VDC) which can be taken from access control system or from separate power supply source. In the second case it is necessary to make an additional electrical connection (bridge) between both grounds (power supply and RACS system); this connection can be made using any small diameter wire.

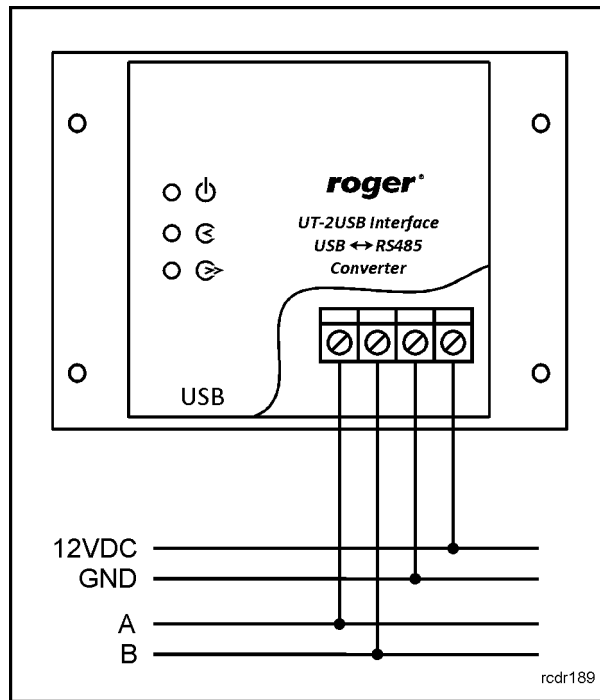


Fig.1 Connection UT-USB to RACS system

2.2 Driver installation

Please install UT-2USB driver (available for download at www.roger.pl) prior to the first connection of device to the computer. The driver is compatible with Windows XP and newer (x86 and x64 versions). When connecting the interface to computer for the first time, please select the option of not connecting with Windows update and installing drivers automatically. After this operation, interface is ready for use and system shows new serial port emulated by UT-2USB.

2.3 LED Indicators

Interface is equipped with three LED indicators, and their meaning is described in the table below.

Table 3. LED Indicators			
Symbol	Name	Color	Description
⏻	POWER	Orange	Indicates connection to USB
⤴	TXD	Green	Indicates data transmitted to RS485
⤵	RXD	Red	Indicates data received from RS485

2.4 Firmware update procedure

UT-2USB firmware can be updated using PC computer. In this case, please:



- Place jumper JP1 and connect interface to PC USB
- Start RogerISP software and choose the port HID (UT-2USB)
- Select file with firmware (*.bin extension) and press Program button
- Proceed according to messages displayed by the software
- Once the update is finished disconnect device from computer and remove jumper

3. ORDERING INFORMATION

Table 4. Ordering information	
Product	Description
UT-2USB	USB-RS485 communication interface

4. PRODUCT HISTORY

Table 5. product history		
Product version	Released	Description
2.0.2	04/2014	The first commercial version of product

 	<p>This symbol placed on a product or packaging indicates that the product should not be disposed of with other wastes as this may have a negative impact on the environment and health. The user is obliged to deliver equipment to the designated collection points of electric and electronic waste. For detailed information on recycling, contact your local authorities, waste disposal company or point of purchase. Separate collection and recycling of this type of waste contributes to the protection of the natural resources and is safe to health and the environment. Weight of the equipment is specified in the document.</p>
--	---

Contact:
ROGER sp. z o.o. sp. k.
82-400 Sztum
Gościszewo 59
Tel.: +48 55 272 0132
Fax: +48 55 272 0133
Tech. support: +48 55 267 0126
Tech. Suport (GSM): +48 664 294 087
E-mail: pomoc.techniczna@roger.pl
Web: www.roger.pl